


Congratulations on the purchase of your Hotwire Heating System.

The thermostat allows you to set the ideal room temperature at the time you want. There are several switching patterns available that can be set to your specific needs. You can either rely on the factory settings or make the settings that suit your personal needs.

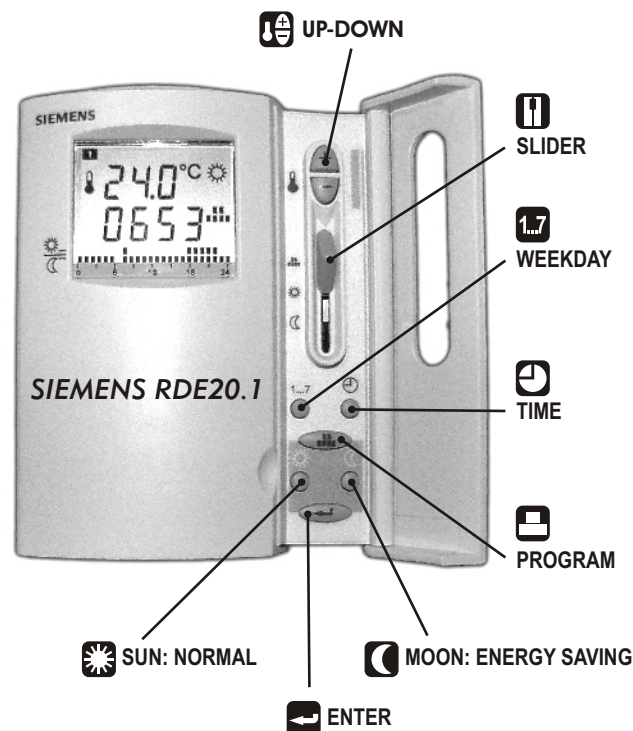

1 Set the clock

Press the TIME button



Adjust clock to current time using the UP-DOWN button



Leave for 5 seconds to set.

2 Set day of the week

Press the WEEKDAY button



Adjust to current day of week using the UP-DOWN button



M=1, T=2, W=3, TH=4, FR=5, SA=6, SU=7

Leave for 5 seconds to set.

3 Set heating temperature

This sets the normal temperature that you would like your HotWire system to be set at.

Press the SUN button



Adjust to required temperature using the UP-DOWN button



Leave for 5 seconds to set.

4 Set minimum heating temperature

This setting determines the minimum temperature you would like your floor to be. i.e. Setting the temperature at which Hotwire will activate.

Press the MOON button



Adjust to required temperature using the UP-DOWN button



Leave for 5 seconds to set.

NOTE: This can be set to OFF.

Press the MOON button



Set to 5 degrees



Hold down the 'DOWN' button for 4 seconds until the word 'OFF' appears.

5 To turn Hotwire on

If you find that you are cold and want to turn the heating on, simply move the slider to "Normal".



If you want to turn it off again simply move the slider back to "Energy Saving"



To set daily times

Move front SLIDER to the position shown.

Press the PROGRAM button.

Time setting starts from 00:00 in the morning.




Press the "Energy Saving" button for the Economy Heating or OFF periods.

Keep pressing the button to increase the time.

Press the "Normal" button for the ON periods.

Keep pressing button to increase ON time.

The screen will look like this for the following times:

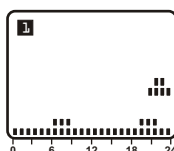

Economy Heating of OFF	00:00 to 06:00
Heating ON	06:00 to 10:00
Economy Heating or OFF	10:00 to 18:00
Heating ON	18:00 to 22:00

If you make a mistake press the Program button and start again.


When Day 1 is programmed press the "Enter" button.

The Thermostat will move to day 2.

Program all 7 days then press the program button to exit programming.

Note: To review your programming press the program button.

Press the weekday button to review the different days.

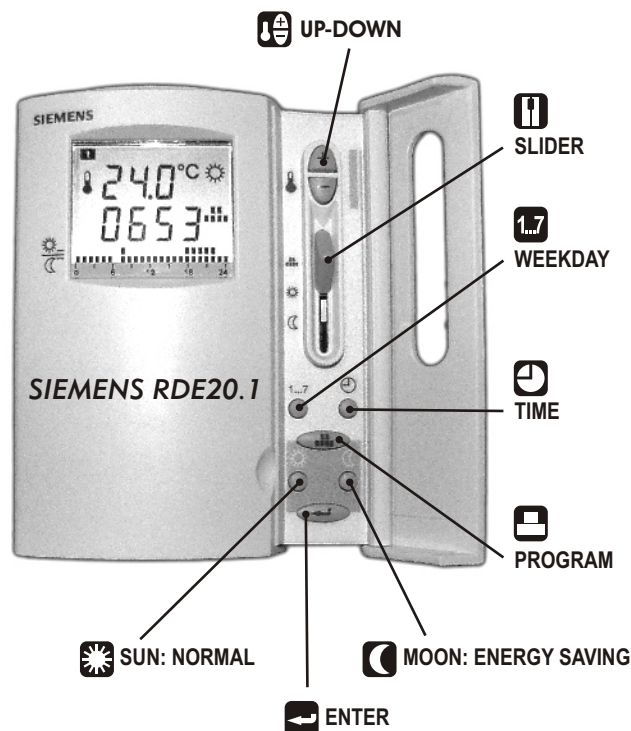

heating - where it matters most